M minniemobil



Charger Wall Mount Instructions for Assembly and Use

CHARGER WALL MOUNT

Stylish wall mount for the charger of your minniemobil.

1. COMPONENTS

- 1 Wall Mount
- 2 Screws
- 2 Wall plugs



2. ASSEMBLY

- 2.1. Place the Wall Mount on the wall where you would like to have your charger and even it out.
- 2.2. Mark the required position for the two boreholes on the wall (Fig. 2).
- 2.3. Bore the holes and place the plugs.
- 2.4. Place the Wall Mount and insert the screws.

3. USE

- 3.1. Place the charger on the Wall Mount.
- 3.2. Roll up the excess of cable behind the Wall Mount plate (Fig. 3).
- 3.3. Plug in the charger to the wall socket.
- 3.4. Place the charger's scooter plug at the Wall Mount's groove made for this purpose, making it ready for you to pick it up when the accumulator of your minnie-mobil needs a charge (Fig. 4).



Your local dealer:				
Date of purchase:	/	/		
Necessary for wa	rranty			

NOTICES TO CONSUMER

The warranty covers all defects of the product which are demonstrably attributable to material or manufacturing defects. The warranty period is 24 months after receipt of the readiness for dispatch, at the latest after delivery. Excluded from the warranty are damages which are caused by normal wear and tear, by intent, negligent or improper operation or use. No warranty is given if you use inappropriate care products, lubricating oils and greases.



Minniemobil GmbH Grünwalder Weg 28c 82041 Oberhaching Phone: +49 89 651089 22 Info@minniemobil.com www.minniemobil.com Germany